

With your Allied Telesis remote:

1. Press the **MENU** button.
2. Scroll down to the **Installation** and press **OK**.



3. In Cable Installation menu, Scroll to **Transponder Scan** and press **OK**.



4. Validate the settings shown:
 - a. Frequency = **273.000 MHZ**
 - b. Symbol Rate = **05360 Ks/s**
 - c. Scan Mode = **256QAMB**
 - d. NIT Search = **YES**
 - e. Channel = **NEW**

5. Scroll to **Search** and press **OK**.

